



TANK MOUNTING INSTRUCTIONS

SP500 SP800 SP1000 SP1200 SP1500 New SP1600

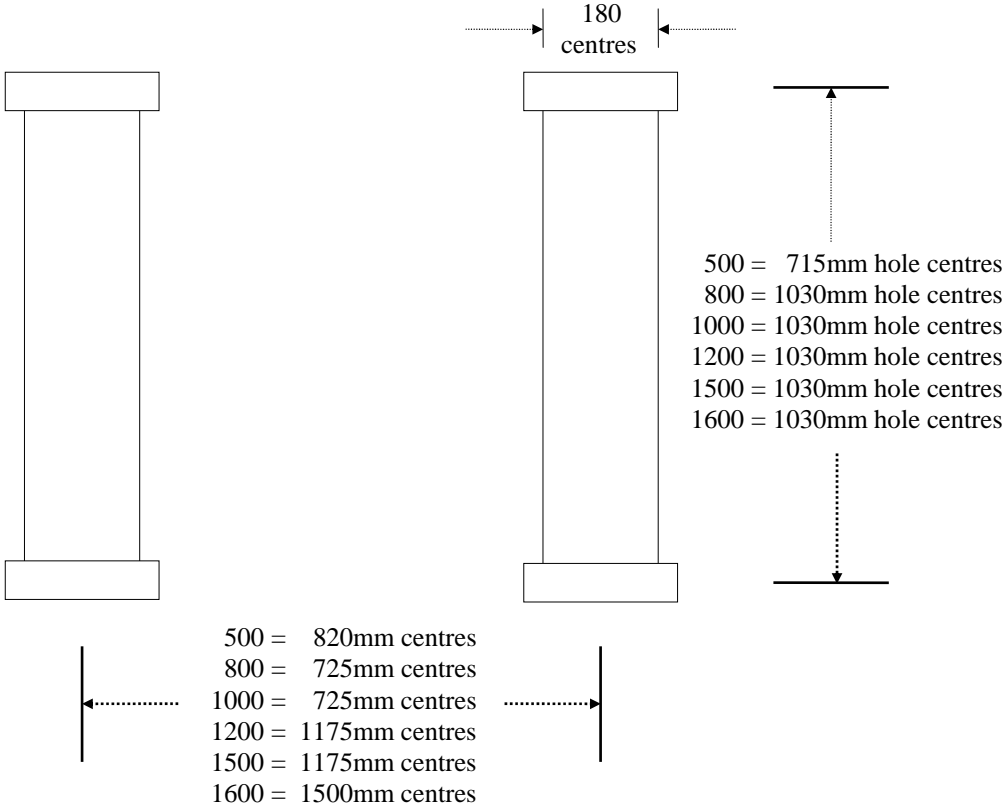

Note: Sump should be supported by either a bearer or truck tray when full

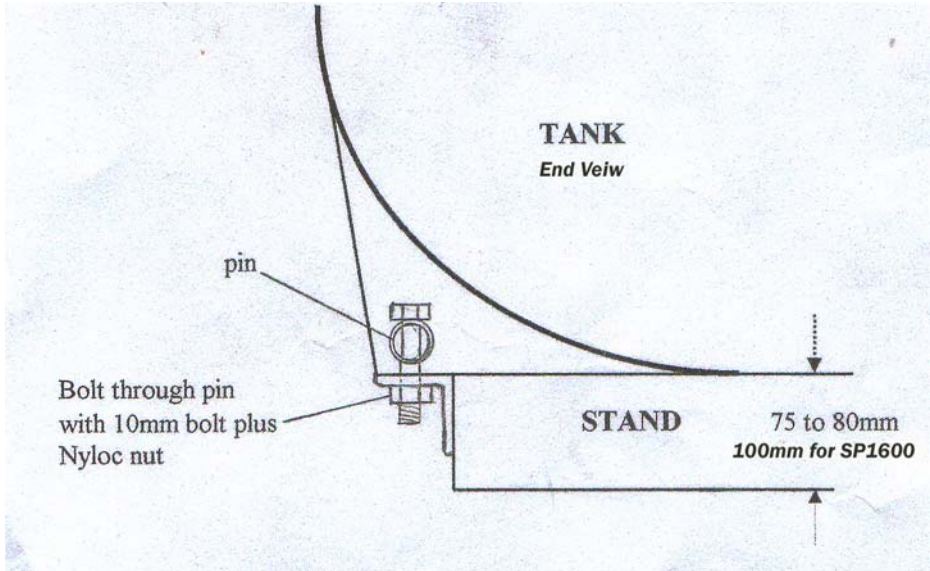

Rota Moulding (WA) Pty Ltd
 4 Artello Bay Road MIDVALE WA 6056
 Ph: (08) 9250 1125 Fax: (08) 9274 3688